




BEDRUG[®] BEDLINER INSTALLATION INSTRUCTIONS

WARNING: IMPROPER INSTALLATION WILL RESULT IN LINER FLYING OUT OF THE TRUCK! FOLLOW INSTRUCTIONS EXACTLY!

1. Read all instructions before installing.
2. The BedRug floor and siderugs are shipped unzipped.
3. Remove BedRug floor and siderugs from box.
4. Zip BedRug floor and siderugs together to form the one-piece soft bed liner.
5. A very aggressive hook and loop fastening system has been designed to hold the BedRug bedliner in open bed trucks.
6. Continuous loop fastener strips are sewn to the liner.
The hook fasteners have a self-adhesive backing to stick to the bed of the truck.
7. Before BedRug is placed in truck bed, apply all hook fasteners to BedRug per the locations noted below.

HOOK FASTENER LOCATIONS

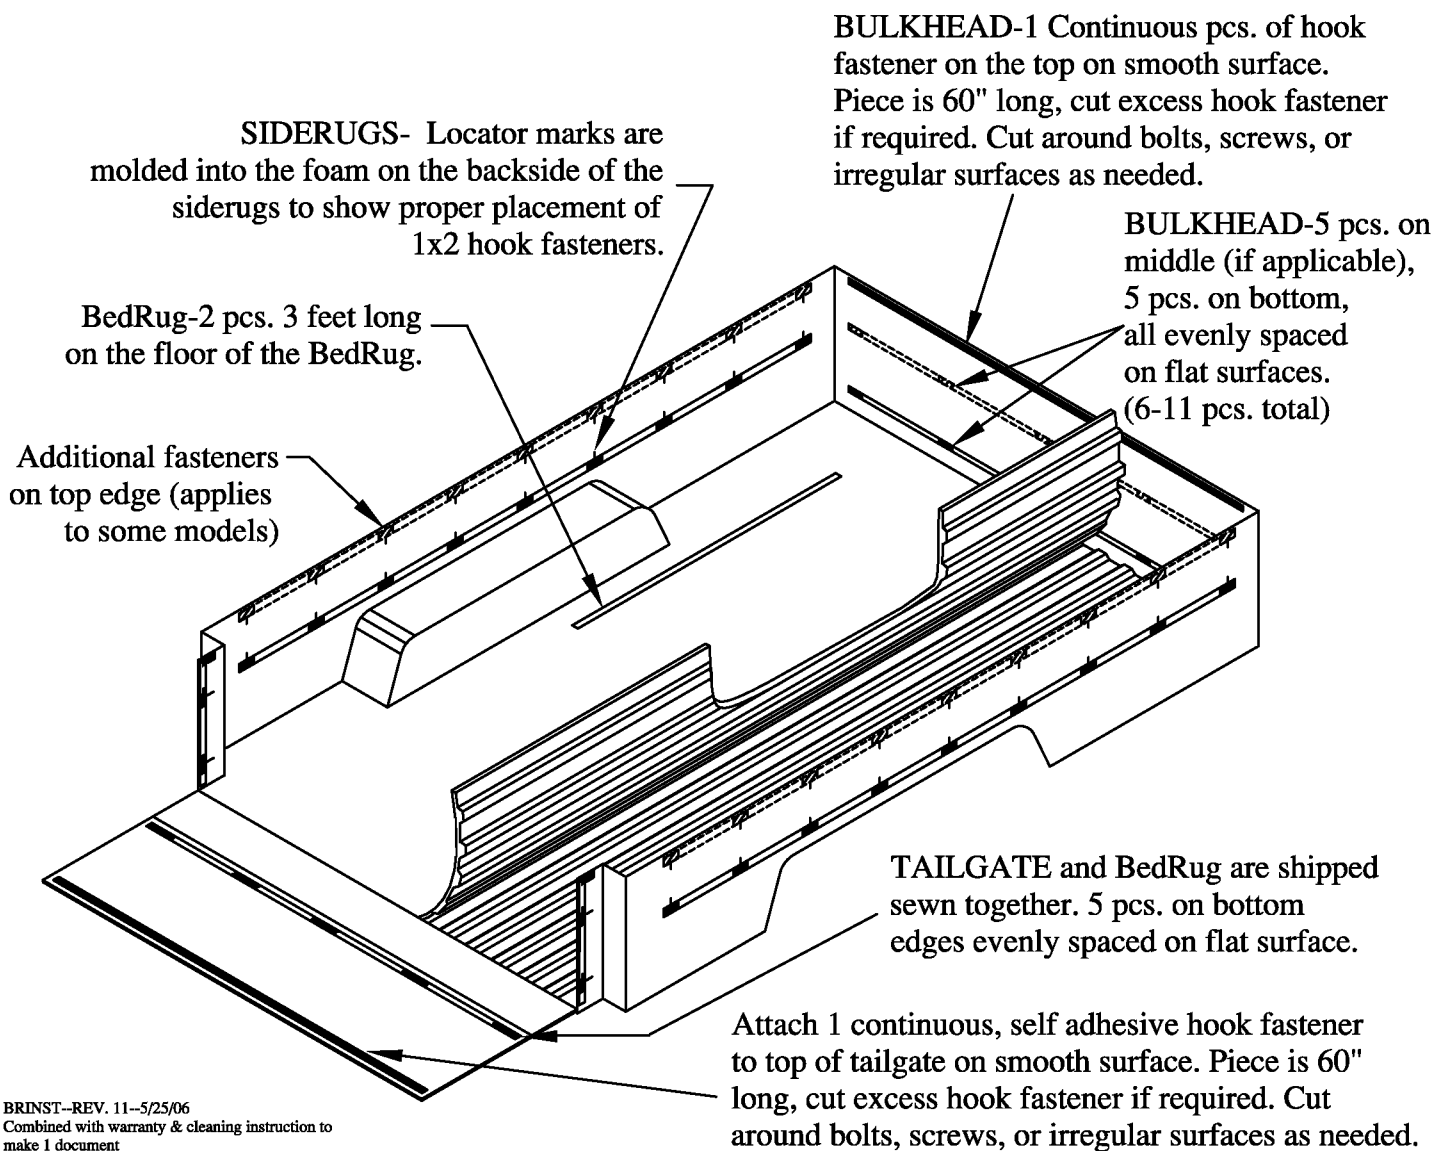



8. Lay the BedRug soft bed liner in the bed of the truck to determine the exact location and fit.
Note: Some truck beds are equipped with tie-down hooks, load extenders and other functional equipment. These may be located on the floor, bulkhead or sidewalls. For equipment such as this, the installer must either:
 - A. Cut a small slit in the appropriate area of the BedRug allowing the equipment to protrude through the Bedrug into the truck bed. (This will not damage the BedRug.) or
 - B. Remove the equipment until the BedRug installation is complete, then reinstall the equipment on top of the BedRug.

IMPORTANT: Never cut or put slits through any seams or sewn areas of the BedRug. This will cause the seam to come completely apart. Refer to illustration for completing steps 8-14

9. Roll one side of the BedRug up exposing the floor area where the 3' strip of hook fastener is to be adhered.
10. Using a clean lint-free cloth, clean this area thoroughly using NON-PETROLEUM based solvent. Then with a separate cloth, clean the same area again with alcohol. If the cloths become visually soiled, replace them with clean ones.
11. Attach hook fasteners to the loop. For siderugs, be sure to place the 2" long hook fasteners at the locator marks which are molded into the foam. Remove the protective liners for the hook fasteners exposing the adhesive. (SEE ILLUSTRATION) Lay the BedRug down, then FIRMLY rub the fastener(s) down VERY AGGRESSIVELY to assure full engagement of the fastener(s) and the adhesive.

NOTE: TRUCK BED SURFACE TEMPERATURE SHOULD BE 68° F OR HIGHER IN ORDER FOR THE HOOK FASTENER TO ACHIEVE MAXIMUM ADHESION. ALSO, NEVER CONTAMINATE THE ADHESIVE BY TOUCHING IT WITH YOUR FINGERS.

12. Repeat steps 10 and 11 for the opposite side of the BedRug.
13. Repeat steps 10 and 11 on the bulkhead. - Apply long continuous hook fastener to top of bulkhead on smooth surface.
14. Repeat steps 10 and 11 on the siderugs.
15. Repeat steps 10 and 11 on the tailgate. - Apply long continuous hook fastener to top of bulkhead on smooth surface. Tailgate NOTE - Do not adhere hook to surface of plastic tailgate cap. The fastener is designed to be attached below the cap on metal surface.

BEDRUG[®] CLEANING INFORMATION

The mildew resistant BedRug foam will not absorb liquids. The engineered polypropylene fiber top surface resists stains and deterioration from acids, chemicals, gas and oils, etc. Therefore, by following the cleaning instructions below, your BedRug will remain serviceable for as long as you own your truck.

Cleaning your BedRug is easy:

1. A vacuum, broom, brush or compressed air can be used to remove dirt, grime, sand, mulch etc. Due to the fact that water will not harm the BedRug, pressure washing is also an effective way to clean a soiled BedRug.
2. Although acids will not harm the BedRug, baking soda should be applied immediately to neutralize the acid to ensure the safety of the paint on the truck.
3. To clean tougher jobs such as gasoline, oil, chemicals, acid spills or leaks from your BedRug use detergent soap and water, then rinse thoroughly. This detergent soap is used in most car wash locations with pressure washing equipment. The BedRug polypropylene closed-cell foam will not absorb water and the polypropylene fiber dries in minutes.

If you have additional questions, call after-market customer service at Wise Industries, Inc. 1-800-462-8435.

Retain this cleaning information with your vehicle owner's manual for future reference.

BEDRUG[®] BEDLINER

LIMITED WARRANTY

Wise Industries warrants BedRug, SUV liner, and VanRug, for pickup trucks, SUV's and vans to be free from defects in materials and workmanship. BedRug Bedliners will be warranted for the duration of the vehicle ownership by the original BedRug purchaser. The terms of this warranty may vary from state to state. You may have rights under specific state laws that differ from the terms of this warranty. Proof of purchase will be required for warranty service. Customer modifications and/or improper return packaging of the product may void this warranty. Product should be cleaned before return. For warranty instructions, returns and packaging contact Wise Industries, Customer Service at 800-462-8435. Labor and shipping are not covered under the terms of this agreement.

Retain this warranty information with your vehicle owner's manual for future reference.

FOR WARRANTY SERVICE CALL 800-462-8435