


Light Wrench Instruction Manual

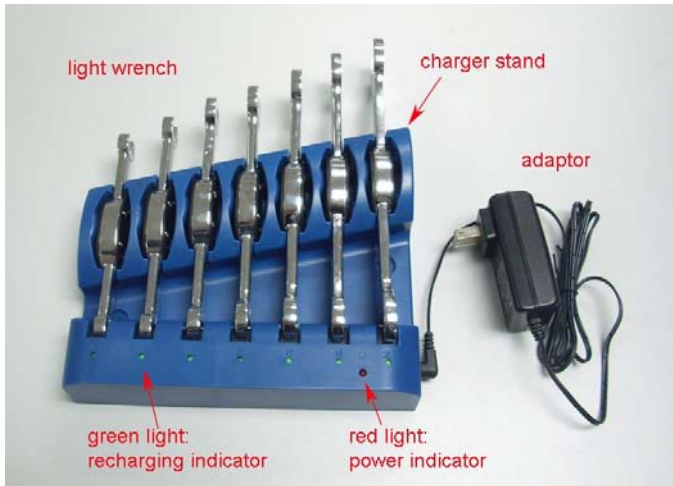

1. Light Wrench Includes:

Light Wrench (British with Standard: 3/8", 7/16", 1/2", 9/16", 5/8", 11/16" and 3/4". And Metric with Standard: 10mm, 12mm, 13mm, 15mm, 17mm, 18mm and 20mm), one adaptor and one charger stand.

2. To recharge Light wrench:

A) Place each wrench in the slot based on the size
For example 3/8" side should be placed in the slot marked 3/8". Wrench will not fit if placed upside down and could break charging stand.

B) Insert the wrench into the charging stand with the black contact plate facing the open charging side- wrench will not fit the other way and could break the contact plate.



3. Indicator Light

A) When charger is plugged in the red indicator light will turn ON.

B) When charger is charging the green light will turn ON.

C) When charger is fully charged the green light will turn OFF.

4. Placement of charger stand

A) Keep charger stand on dry surface.

B) Charger stand can be hung on a wall using the peg holes.

5. Adaptor meets UL standards (input: 100-240V)

